

Quick Start Guide

1. Go to www.wirelesstrophycam.com and click "**SETUP A NEW ACCOUNT**".
2. Fill in your personal info and set your notification preferences. Click "**CREATE**".
3. Click the plus sign (+), name your camera and enter its serial number (*printed inside the camera-take a photo of the SN with your cell phone for later reference*). Click "**ADD IT**".
4. Open the camera's latches and install 12 AA batteries (*lithium or alkaline*). Insert a new SD card (*up to 32 GB*).
5. Move camera's power switch to the **SETUP** position, then press the **MENU** button.
6. Select your preferred method of receiving images (**Cell phone number** or **Email address**). Press **OK** on the camera's control panel.
7. Enter your cell phone number or email address (*lower case letters are not necessary or provided in email settings*).
8. Press **MENU**. The camera will save your email address or cell number, then countdown and take a test photo. **Note: the LCD display will power off while the camera is transmitting the image. If the camera is unable to connect to a valid cell phone # or email, the display will indicate "test photo send fail".**
9. The camera displays the signal strength for the last connection. Check your cell phone or email to verify the test image was received.
10. After you have verified the camera is transmitting images, move the switch to **ON** to initiate "live" triggering, and leave the area.
11. You can now log in to your account at wirelesstrophycam.com to view new images, change settings, and monitor the status of one or more wireless cameras. You can also control your camera(s) remotely via the Bushnell Wireless Trophy Cam app, a free download for iPhone® and Android™.



iPhone® is a registered trademark of Apple Inc.

Android™ is a trademark of Google Inc.

1

ACCOUNT LOGIN

E-mail Address

☐ Remember Me
Forgot Password

LOGIN

SET UP A NEW ACCOUNT!

Manage your wireless trailcams
Purchase wireless data
View, edit and share photos

2

NEW ACCOUNT REGISTRATION

USER INFORMATION

First Name: Last Name:

Street Address:

City:

State: Country:

ZIP Code:

Mobile Number:

Primary Contact Number (if different than mobile number):

LOGIN INFORMATION

Email Address:

Password:

Confirm Email Address:

Confirm Password:


NOTIFICATION SETTINGS

	EMAIL	TEXT*
Notify me when new TrailCams are uploaded	<input type="checkbox"/>	<input type="checkbox"/>
Notify me when a camera fails to lock in	<input type="checkbox"/>	<input type="checkbox"/>
Notify me when my batteries are low	<input type="checkbox"/>	<input type="checkbox"/>
Notify me when my SD card is nearly full	<input type="checkbox"/>	<input type="checkbox"/>
Notify me when my data plan requires action	<input type="checkbox"/>	<input type="checkbox"/>
Notify me when my camera location changes	<input type="checkbox"/>	<input type="checkbox"/>

*Standard text

Cancel Login

3

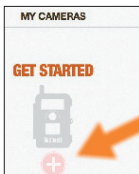

ADD A CAMERA

Give your TrailCam a name

My Trail Cam

Serial Number

BW2013

ADD IT!



4



6

Wireless Settings

Send images to:

☒ Cell phone number >

☐ Email address >

Edit: OK Cancel: MENU

7

Cell Phone Settings

Enter Phone Number:

8 0 0 4 2 3 3 5 3 7

Save: MENU

5



8

